INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

CALIBER NO. 6P88 BATTERY: SR621SW


FEATURES: ANALOG MULTI-HAND QUARTZ WATCH WITH

DAY, 24 HOUR AND MONTH

INSTRUCTION MANUAL

- A) DISPLAY AND BUTTON
- **B) OPERATION PROCEDURE**
- C) SETTING THE DAY AND TIME (HOUR, 24 HOUR, MINUTE, SECOND)
- D) SETTING THE MONTH (BY QUICK OPERATION)

A) DISPLAY AND BUTTON

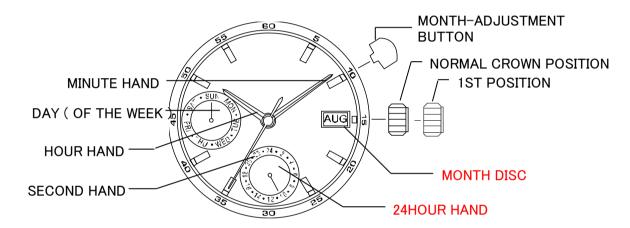

NORMAL CROWN POSITION 1st POSITION

TIME/DAY SETTING (CLOCKWISE)

B) OPERATION PROCEDURE

1 SETTING THE DAY
SETTING THE TIME (HOUR, 24HOUR, MINUTE and SECOND)
2 SETTING THE MONTH

C) SETTING THE DAY AND TIME (HOUR, 24 HOUR, MINUTE AND SECOND)

The hour, 24 hour, minute, second and day are set by the same operation.

SETTING PROCEDURE

 $\overline{\text{DAY}} \rightarrow \overline{\text{HOUR & 24HOUR}} \rightarrow \overline{\text{MINUTE}} \rightarrow \overline{\text{SECOND}}$

C-1) SETTING THE DAY

Pull the crown out to the 1st position to stop the second hand at 0 (12 o'clock). Turn the hour/minute hands in a **clockwise** direction to set a day In order to set the day, you must advance the hour hand by 24 hours per day. **NOTE:**

Do not set the day by turning the crown in counterclockwise direction.

* The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.

C-2) SETTING THE TIME

After setting the day, set the hour (and 24hour) and minute hands.

Turn the hour/minute hands in a **clockwise** direction to set the time.

To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time.

After setting the time, use a time signal to synchronize the watch by pushing crown to the normal position to start the second hand going.

NOTE:

Make sure you have correctly set AM/PM before setting the time.

When the day changes over, it is a.m.. (Day changes over between 0:00a.m. and 5:30a.m. or little later) Check am./p.m. by the 24hour hand.

D) SETTING THE MONTH (BY QUICK OPERATION)

Each time the month-adjustment button is pushed, the month advances one month at a time. Be sure to press firmly on the button when making month changes.

NOTE:

The month disc changes around midnight of the 31st..